



# Secrets


PERSONAL MASSAGER

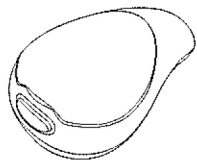


## FOR NON REMOTE VERSION

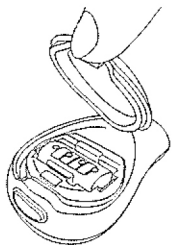

1. Open the battery compartment.

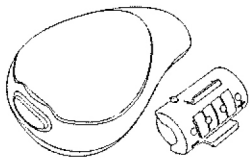


7. Remove the battery cabinet from the massager for extended storage. Store the massager and the cabinet separately.

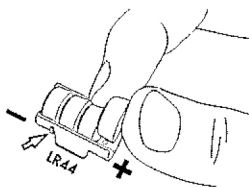


2. Insert the 4 x LR44 batteries into the battery cabinet as shown.


8. To change the batteries, use the tool provided or a paper clip to push out the batteries as shown below:

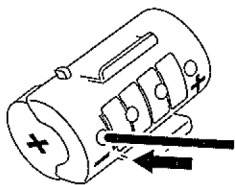


## FOR REMOTE VERSION

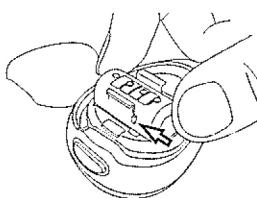


3. Install the battery cabinet back into the battery compartment as shown.

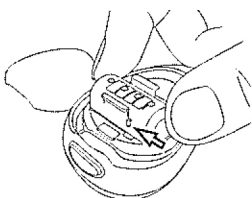


1. Insert the batteries into the massager as explained above.

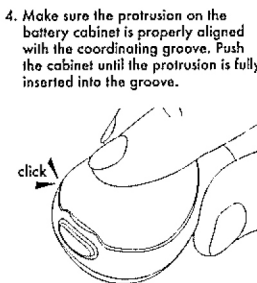


4. Make sure the protrusion on the battery cabinet is properly aligned with the coordinating groove. Push the cabinet until the protrusion is fully inserted into the groove.

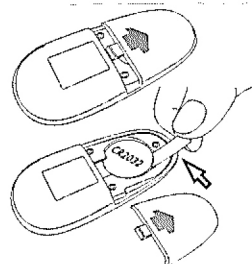

2. Remove insulation paper inside the remote to activate the battery.

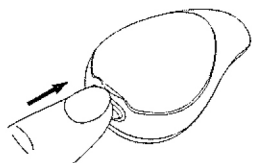

5. Insert the battery compartment door back onto the massager and make sure the door is closed tightly.


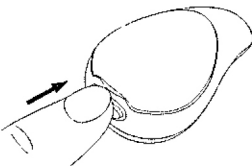


3. Turn on the massager by pressing the top button (short press). When you push the button the unit will go into standby mode and there will be no vibration.


Long press (appx. 2 seconds): unit will turn on. Same method for turning the unit off, press (around 2 second) till LED turns off.

Short press: unit will change massage modes. There are a total of 5 modes. Each time user makes a short press, the massage mode will circulate through the 5 modes. To power off the unit, push and hold the button for appx. 2 seconds.

If the unit is on, The LED light will show. If the unit is off, the LED light will not show.

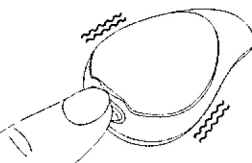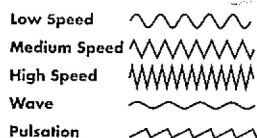


4. Press the top button again to make the massager vibrate.

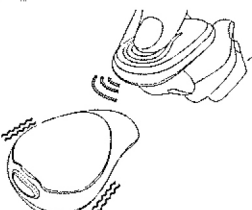


5. Once the massager is vibrating, press the remote control. You will be able to control the vibrations.


6. If you continue to press the remote control, the massager will cycle through 6 modes:

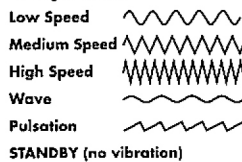


7. IMPORTANT:

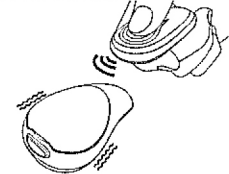





I. TO INSURE PROPER COMMUNICATION BETWEEN THE REMOTE AND THE MASSAGER, ALLOW AT LEAST 3 SECONDS BETWEEN PRESSING THE REMOTE CONTROL TO ADVANCE TO THE NEXT MASSAGE MODE.

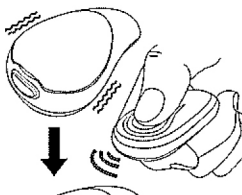


II. HOLDING DOWN THE REMOTE CONTROL BUTTON FOR 3 SECONDS CONTINUOUSLY WILL MAKE THE MASSAGER GO BACK INTO STANDBY MODE. THIS IS CONVENIENT WHEN USING WITH YOUR SIGNIFICANT OTHER TO BE ABLE TO STOP THE VIBRATION REMOTELY.

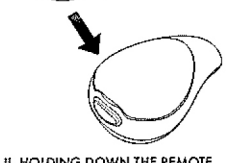


III. WHEN YOU WISH TO TURN OFF THE MASSAGER, PRESS AND HOLD THE BUTTON ON THE MASSAGER UNTIL THE LED LIGHT TURNS OFF.

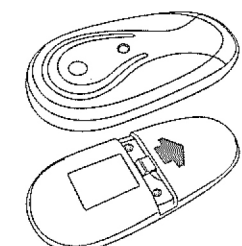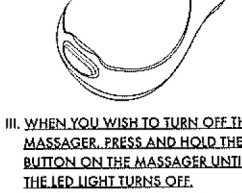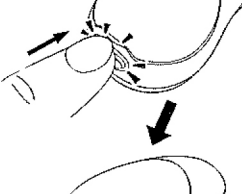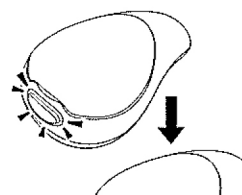

1. Button cell CR 2032 have been pre-installed into the remote control.

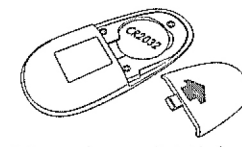


2. Remove the paper slip inside the battery cabinet to activate the battery power in the remote control before use.

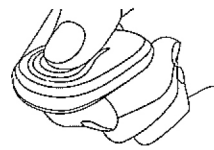

3. Press button on the remote control to control vibration function: Long press ( appx. 2 seconds ): unit will turn on and would be in stand by mode. By holding for 2 seconds you can jump to standby mode at any time (no vibration).

Short press: Unit will change massage modes. There are a total of 5 modes + standby (no vibration). Each time user makes a short press, the massage mode will circulate through the 5 modes and stand by mode. To power off the unit, push and hold the button on the massager ( Not the Remote) for appx. 2 seconds.

LED: Whenever button pressed, LED light will activate to indicate signal is being sent to the massager.

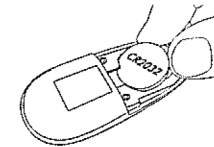

4. Remove the battery from the massager for extended storage. Store the battery and the remote control separately.

## WARNING

THIS ITEM IS NOT WATERPROOF Do not immerse product in water. If you spill liquid on it, dry it immediately with a soft, lint-free cloth.

FOR ADULT USE ONLY. FOR EXTERNAL USE ONLY. REMOVE ALL NECKTIES, NECHLACES AND JEWELRY BEFORE USING THIS MASSAGER.

## IMPORTANT:

Any individual who may be pregnant, has a pacemaker, suffers from the diabetes, phlebitis, and /or thrombosis, is at an increase risk of developing blood clots, or who has pins/screws/artificial joints or other medical devices implanted in his/her body should consult with a physician before using a massaging device designed for home use.

## CARE AND MAINTENANCE:

Remove the batteries from the massager for extended storage. Clean the massager with a soft, damp cloth. DO NOT fully submerge or clean with an alcohol or chemical based cleaner.

## SPECIFICATIONS

Frequency: 433MHz  
Control range: 6 meters in open area.  
Bullet battery: LR44 (4 batteries)  
Remote battery: CR 2032 (1 battery)

## BATTERY INSTALLATION

The batteries install individually into the battery cabinet. Make sure to install batteries in the proper direction. Do not attempt to recharge or disassemble batteries. Use ONLY fresh batteries in correct size and type.

**WARNING - DO NOT** attempt to insert batteries directly into the massager. Batteries must be installed into the cabinet. Misuse may cause damage, improper function or shortage.

The battery may explode if mistreated. **BATTERY PRECAUTIONS** Dispose of the old batteries properly. Do not dispose of the old batteries in a fire.

Do not leave the batteries where a child or pet could play with or swallowed, contact a physician immediately. The batteries may explode if mistreated. Do not attempt to recharge or disassemble the batteries. Use only fresh batteries of the required size and type. Do not mix old and fresh batteries, different types of batteries, or rechargeable batteries of different capacities.

Model no: VPR - 6700  
FCC ID: 2ACLV6700  
Battery: CR2032 3V



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and  
(2) this device must accept any interference received, including interference that may cause undesired operation.

Generation Products™  
Horsham, PA 19044  
All Rights Reserved



This product is CE certified.  
CE2200