



Cock Ring

User Manual

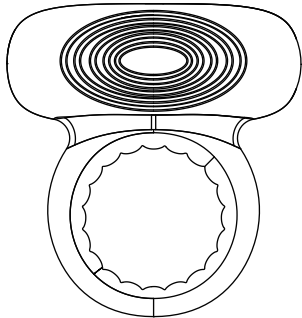


Specifications

Material	Silicone + ABS
Size	2.87*2.7*1.0 in
Net Weight	48.3g
Waterproof	IPX6
Working Frequency	10 frequencies
Working Time	About 35 mins
Noise	< 50db

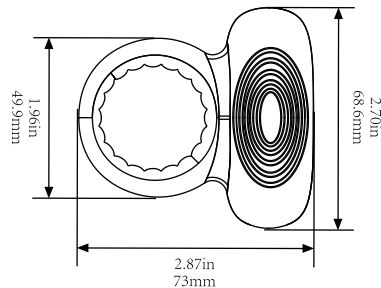

Button Introduction

- Press the "⊕" button for 3s to turn round head on/off, press again to change the frequencies, 10 frequencies change cyclically.

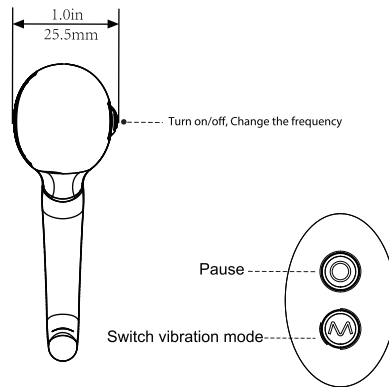

How to Charge

- ⊕ is a waterproof charging hole;
- Please use the charging cable included and insert into the charging hole, While the indicator on, the button flashes, the device starts charging.
- It takes 40 minutes to fully charge for 35minutes non-stop-play. When fully charged, the indicator stops flash.

Waterproof Charging Hole



Cleaning and Maintain

- Clean the device with warm water and soap. And then run it through some hot water to wash any traces of soap.
- Pat it dry with a clean lint-free cloth or a microfiber towel so there is no fluff left on it.
- Put this product In a dry place, keep the storage environment clean and separate from other materials. away from children s contact range.
- Don't use alcohol to clean the product, for alcohol would corrode the surface of the product and accelerate its aging process.
- The product waterproof level is IPX6 and not suitable for playing in the water. For its long service life, don't soak it in the water for a long time.

