nsnovelties

Document Shi-shi I

Shi-shi Midight Rider

User Guide

Last Modified 8-9-2021

Size 21 cm w x 10.5 cm h
Format Accordion Fold

Cut — Fold - - - - -

Copyright © 2018 NS Novelties. All rights reserved. The shape and appearance of this packaging and enclosed product is a trademark and trade dress of NS Novelties.

nsnovelties

SHI/SHI MIDNIGHT RIDER

For warranty information, latest products and news, visit us at:

nsnovelties.com

HOW TO PLAY:

Press & hold POWER button for 1.5 seconds to enter standby mode. The indicator light will start to blink.

Quick press the vibration button to cycle through the 3 speeds and 7 frequency vibration modes.

You can also quick press the power button on the remote to cycle through speeds/functions.

To power off all functions and the device hold power button for 1.2 seconds.

The blinking light will become solid when the deice is fully charged.

e

DC for Remote on the back

HOW TO CARE

Wash toy after each use with liquid anti-bacterial soap and water.

Pat dry with soft, cotton towel and allow to air

For maximum pleasure, use lubricant with this product.

Battery: USB Rechargeable

Lithium Polymer

Charge Time: Approximately

120 minutes

Play Time: Approximately

60 minutes

Material: Silicone+ABS Waterproof: Device IPX 7

Remote IPX 0

nsnovelties.com