

chroma

**SUNRISE
RECHARGEABLE
VIBE**

For warranty information, latest products, and news visit us at:
nsnovelties.com

CARE

- * Turn off device when not in use.
- * Do not operate the device while charging.
- * Please follow the charge times indicated in the device specifications.
- * Wash after each use with liquid anti-bacterial soap and water.
- * Pat dry with a cotton towel and allow to air dry completely.

Product

Dimensions: 5.43 x 0.75 x 0.75 (in)

IPX Rating: IPX7

Battery: Lithium Ion

Charge Time: Do not exceed 120 minutes


Run Time: 60 minutes

Modes: 10



PLAY

- * Press & hold button on device for 2 seconds to power on/off.
- * Quick press to cycle through vibration modes.

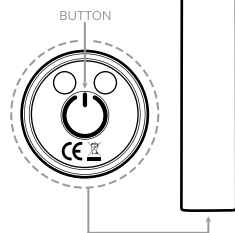

CHARGE

- * The light will blink while the device is charging.
- * The light will become solid once the device is fully charged.

