

desire

## SONATA

For warranty information, latest products, and news visit us at:  
[nsnovelties.com](http://nsnovelties.com)

### CARE

- \* Turn off device when not in use.
- \* Do not operate the device while charging.
- \* Please follow the charge times indicated in the device specifications.
- \* Wash after each use with liquid anti-bacterial soap and water.
- \* Pat dry with a cotton towel and allow to air dry completely.

#### Product

**Dimensions:** 6.93x118x1.38 (in)

**IPX Rating:** IPX-6 High pressure water resistant

**Battery:** Rechargeable

**Charge Time:** Do not exceed 70 minutes

**Run Time:** 45 minutes

**Modes:** 10



### PLAY

- \* Press & hold power button on Sonata for 2 seconds to power on/off.
- \* Quick press power button to cycle through speeds/functions.

POWER →



### CHARGE

- \* The light will blink while the device is charging.
- \* The light will become solid once the device is fully charged.

