

FRONT

CARE

- * Turn off device when not in use.
- * Do not operate the device while charging.
- * Please follow the charge times indicated in the device specifications.
- * Wash after each use with liquid anti-bacterial soap and water.
- * Pat dry with a cotton towel and allow to air dry completely.

Product
Dimensions: 7.17 x 1.34 x 1.34 (in)
IPX Rating: IPX7 Waterproof
30 min. immersion
3 ft.
Battery: Rechargeable
Charge Time: Do not exceed
150 minutes
Run Time: 120 minutes
Modes: 10



PURE

JOY
TEXTURED
VIBE


For warranty information, latest
products, and news visit us at:
nsnovelties.com

BACK

PLAY


- * Press & hold the power button for 2 seconds to power on/off.
- * Quick press the power button to cycle through speeds/functions.

POWER
BUTTON

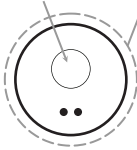

CHARGE

- * The light will blink while the device is charging.
- * The light will become solid once the device is fully charged.

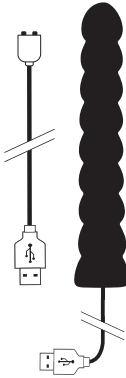

FOLD

