

## FRONT

⑤

⑥

①

### CARE

- \* Turn off device when not in use.
- \* Do not operate the device while charging.
- \* Please follow the charge times indicated in the device specifications.
- \* Wash after each use with liquid anti-bacterial soap and water.
- \* Pat dry with a cotton towel and allow to air dry completely.

**Product Dimensions:** 4.29 x 3.54 x 1.57 (in),  
Remote: 2.68 x 1.34 x 0.87

**IPX Rating:** IPX7 Waterproof 30 min. immersion 3 ft.  
Remote: IPX0 No water protection

**Battery:** Rechargeable, Remote: AAA

**Charge Time:** Do not exceed 120 minutes

**Run Time:** 50 minutes

**Modes:** 10



For warranty information, latest products, and news visit us at:  
[nsnovelties.com](http://nsnovelties.com)

## SECRETS

### ECHO INSERTABLE VIBE WITH REMOTE

## BACK


②

③

④


### PLAY

- \* Press & hold the power button on the vibe for 2 seconds to power on and enter standby mode.
- \* Quick press the power button to cycle through speeds/functions.
- \* Press & hold the power button on the vibe for 2 seconds to power off.

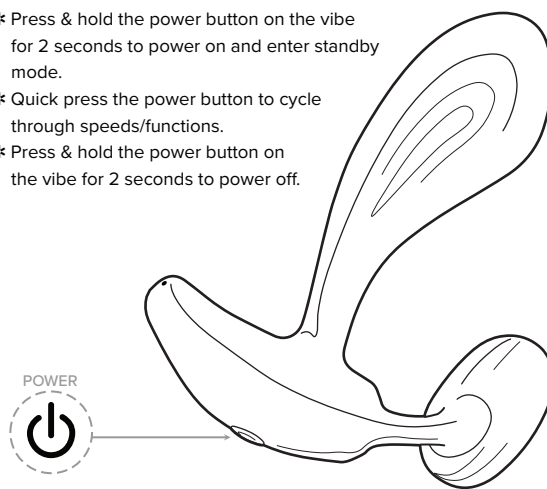

### PLAY

- \* To use the remote, the vibe must be powered on and in standby mode.
- \* Press & hold the power button on the remote for 2 seconds to power on/off.
- \* Quick press the + or - buttons to cycle through speeds/functions.

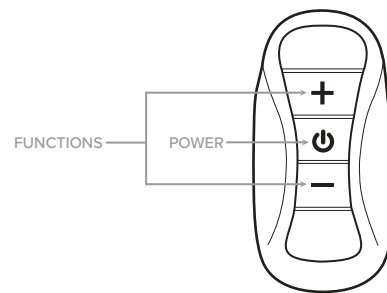

### CHARGE

- \* The light will blink while the device is charging.
- \* The light will become solid once the device is fully charged.

