

FRONT

CARE

- * Turn off device when not in use.
- * Do not operate the device while charging.
- * Please follow the charge times indicated in the device specifications.
- * Wash after each use with liquid anti-bacterial soap and water.
- * Pat dry with a cotton towel and allow to air dry completely.

Product
Dimensions: 9.02 x 1.54 x 1.61 (in)
IPX Rating: IPX7 Waterproof 30 min. immersion 3 ft.
Battery: Rechargeable
Charge Time: Do not exceed 90 minutes
Run Time: 60 minutes
Modes: 12



inYa

**ELECTRICA
PHALLIC
DIGITAL VIBE**

For warranty information, latest products, and news visit us at:
nsnovelties.com

BACK

PLAY


- * Press & hold the power button for 2 seconds to power on and enter standby mode.
- * Quick press the vibration button to cycle through speeds/functions.
- * Press & hold the power button for 2 seconds to power off.

POWER
VIBRATION



CHARGE

- * The light will blink while the device is charging.
- * The light will become solid once the device is fully charged.

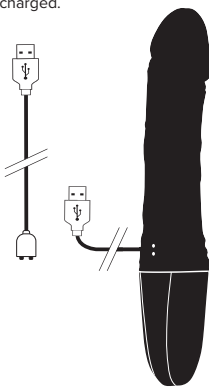

FOLD

