

FRONT

⑤

⑥

①

CARE

- * Turn off device when not in use.
- * Do not operate the device while charging.
- * Please follow the charge times indicated in the device specifications.
- * Wash after each use with liquid anti-bacterial soap and water.
- * Pat dry with a cotton towel and allow to air dry completely.

Product Dimensions: 4.21 x 1.97 x 1.61 (in),
Remote: 2.36 x 1.5 x 0.98

IPX Rating: IPX7 Waterproof 30 min. immersion 3 ft.
Remote: IPX0 No water protection

Battery: Rechargeable, Remote: 23A

Charge Time: Do not exceed 150 minutes

Run Time: 60 minutes

Modes: 16



For warranty information, latest products, and news visit us at:
nsnovelties.com

Renegade

ALPINE 2.0
GYRATING AND VIBRATING PLUG
WITH REMOTE

BACK

 
 
②

③

④


PLAY

- * Press & hold the power button on the vibe for 2 seconds to power on and enter standby mode.
- * Quick press the power button to activate and to cycle through gyration speeds/functions.
- * Quick press the vibration button to activate and cycle through speeds/functions.
- * Press & hold the power button for 2 seconds to power off.

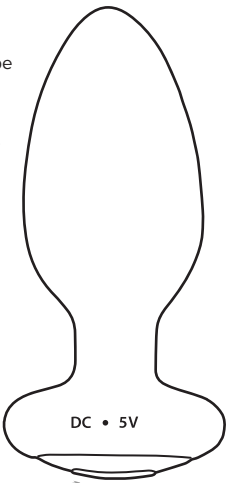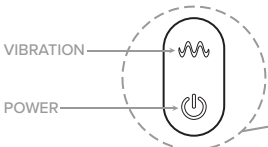

PLAY

 - PLAYING WITH REMOTE**
- * To use the remote, the vibe must be powered on and in standby mode.
 - * Quick press the power button to activate and to cycle through gyration speeds/functions.
 - * Quick press the vibration button to activate and cycle through speeds/functions.

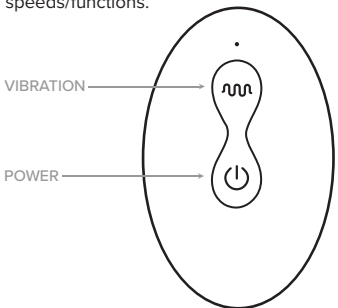

CHARGE

- * The light will blink while the device is charging.
- * The light will become solid once the device is fully charged.

