

FRONT

CARE

- \* Turn off device when not in use.
- \* Do not operate the device while charging.
- \* Please follow the charge times indicated in the device specifications.
- \* Wash after each use with liquid anti-bacterial soap and water.
- \* Pat dry with a cotton towel and allow to air dry completely.

<b>Product Dimensions:</b>	2.64 x 2.28 x 2.28 (in)
<b>IPX Rating:</b>	IPX6 High pressure water resistant
<b>Battery:</b>	Rechargeable
<b>Charge Time:</b>	Do not exceed 120 minutes
<b>Run Time:</b>	60 minutes
<b>Modes:</b>	10



Inya


THE VIBRATING ROSE

For warranty information, latest products, and news visit us at:  
[nsnovelties.net](http://nsnovelties.net)

BACK

PLAY

- \* Press & hold the power button for 2 seconds to power on/off.
- \* Quick press the power button to activate and cycle through the vibration modes.
- \* Press & hold the power button for 2 seconds to power off.

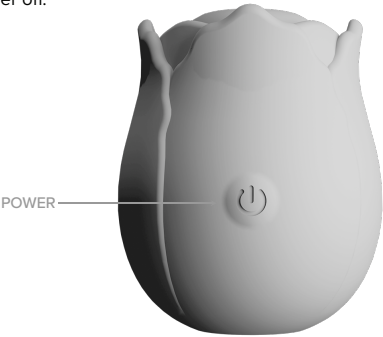

CHARGE

- \* The light will blink while the device is charging.
- \* The light will become solid once the device is fully charged.

