

FRONT

CARE

- \* Turn off device when not in use.
- \* Do not operate the device while charging.
- \* Please follow the charge times indicated in the device specifications.
- \* Wash after each use with liquid anti-bacterial soap and water.
- \* Pat dry with a cotton towel and allow to air dry completely.

**Product**  
**Dimensions:** 7.56 x 1.1 x 1.26 (in)  
**IPX Rating:** IPX7 Waterproof 30 min. immersion 3 ft.  
**Battery:** Rechargeable  
**Charge Time:** Do not exceed 90 minutes  
**Run Time:** 60 minutes  
**Modes:** 10



**inYa**

**TECHNICA  
DIGITAL  
WARMING VIBE**

For warranty information, latest products, and news visit us at:  
[nsnovelties.net](http://nsnovelties.net)

BACK

PLAY

- \* Press & hold the power button for 2 seconds to power on and enter standby mode.
- \* Quick press the power button to activate and cycle through vibration modes.
- \* Double press the power button to activate/deactivate the warming function.


POWER →

- \* Press & hold the power button for 2 seconds to power off.



CHARGE

- \* The light will blink while the device is charging.
- \* The light will become solid once the device is fully charged.

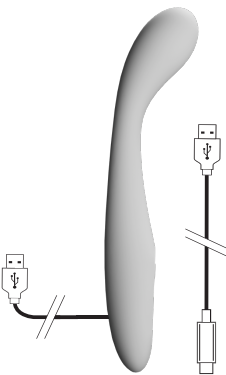

FOLD

