

FRONT

CARE

- * Turn off device when not in use.
- * Do not operate the device while charging.
- * Please follow the charge times indicated in the device specifications.
- * Wash after each use with liquid anti-bacterial soap and water.
- * Pat dry with a cotton towel and allow to air dry completely.

Product
Dimensions: 7.09 x 1.38 x 2.44 (in)
IPX Rating: IPX9 Waterproof against high pressure, high temperature spray downs
Battery: Rechargeable
Charge Time: Do not exceed 90 minutes
Run Time: 60 minutes
Modes: 18



inYa

CYBERLUXE
DIGITAL
RABBIT VIBE
WITH RING

For warranty information, latest products, and news visit us at:
nsnovelties.net

BACK

PLAY


- * Press & hold the power button for 2 seconds to power on and enter standby mode.
- * Quick press the power button to activate and cycle through vibration modes.
- * Quick press the top button to activate and cycle through thrust/ring modes.
- * Press & hold the power button for 2 seconds to power off.

VIBRATION
POWER



CHARGE

- * The light will blink while the device is charging.
- * The light will become solid once the device is fully charged.

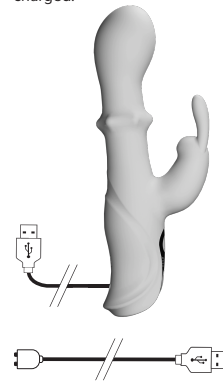

FOLD

