

FRONT

CARE

- \* Turn off device when not in use.
- \* Do not operate the device while charging.
- \* Please follow the charge times indicated in the device specifications.
- \* Wash after each use with liquid anti-bacterial soap and water.
- \* Pat dry with a cotton towel and allow to air dry completely.

**Product Dimensions:** 4.76 x 1.46 x 1.46 (in)  
**IPX Rating:** IPX4 Splashproof  
**Battery:** Rechargeable  
**Charge Time:** Do not exceed 90 minutes  
**Run Time:** 120 minutes  
**Modes:** 10



inYa


SHIMMER  
ALUMINUM VIBE

For warranty information, latest products, and news visit us at:  
[nsnovelties.net](http://nsnovelties.net)

BACK

PLAY

- \* Press & hold the power button for 2 seconds to power on and enter standby mode.
- \* Quick press the power button to cycle through speeds/functions.
- \* Press & hold the power button for 2 seconds to power off.

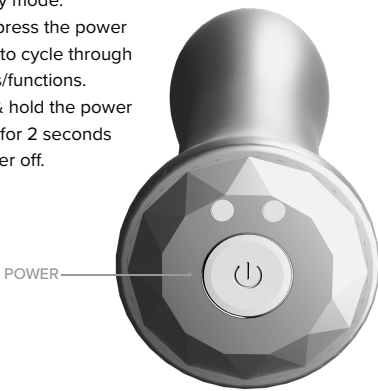

CHARGE

- \* The light will blink while the device is charging.
- \* The light will become solid once the device is fully charged.

