

FRONT

⑤

⑥

①

CARE

- * Turn off device when not in use.
- * Do not operate the device while charging.
- * Please follow the charge times indicated in the device specifications.
- * Wash after each use with liquid anti-bacterial soap and water.
- * Pat dry with a cotton towel and allow to air dry completely.

Product Dimensions: 4.45 x 4.13 x 1.38 (in),
Remote: 2.64 x 1.46 x 0.63
IPX Rating: IPX7 Waterproof 30 min. immersion 3 ft.
Remote: IPX7 Waterproof 30 min.
immersion 3 ft.
Battery: Rechargeable, Remote: Rechargeable
Charge Time: Do not exceed 90 minutes
Run Time: 55 minutes
Modes: 10



For warranty information, latest products, and news visit us at:
nsnovelties.net

Renegade

RAIN
INSERTABLE VIBE WITH REMOTE

BACK

②

③

④


PLAY

- * Press & hold the power button on the vibe for 2 seconds to power on and enter standby mode.
- * Quick press the power button to activate and cycle through speeds/functions.
- * Press & hold the power button on the vibe for 2 seconds to power off.



PLAY

- * To use the remote, the vibe must be powered on and and in standby mode.
- * Press & hold the power button on the remote for 2 seconds to power on/off.
- * Quick press the power button on the remote to cycle through modes.
- * Quick press the up arrow to increase the intensity of vibration.
- * Quick press the down arrow to decrease the intensity of vibration.
- * Each mode has 5 vibration intensity settings.

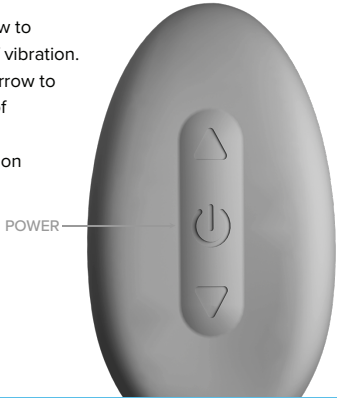

CHARGE

- * The light will blink while the device is charging.
- * The light will become solid once the device is fully charged.

