

FRONT

CARE

- \* Turn off device when not in use.
- \* Do not operate the device while charging.
- \* Please follow the charge times indicated in the device specifications.
- \* Wash after each use with liquid anti-bacterial soap and water.
- \* Pat dry with a cotton towel and allow to air dry completely.

**Product Dimensions:** 7.36 x 1.3 x 1.95 (in)  
**IPX Rating:** IPX7 Waterproof 30 min. immersion 3 ft.  
**Battery:** Rechargeable  
**Charge Time:** Do not exceed 120 minutes  
**Run Time:** 85 minutes  
**Modes:** 9



pretty in  
pink

VELVET

For warranty information, latest products, and news visit us at:  
[nsnovelties.net](http://nsnovelties.net)

BACK

PLAY

- \* Press & hold the power button for 2 seconds to power on and enter standby mode.
- \* Quick press the power button to activate vibration at Setting 1 (low speed). Continue quick pressing to cycle upward through the settings (1 > 9).
- \* Quick press the vibration button to activate vibration at Setting 9 (last pattern). Continue quick pressing to cycle downward through the settings (9 > 1)
- \* Use the power and vibration buttons to switch back and forth between speeds and patterns.
- \* Press & hold the power button for 2 seconds to power off.



CHARGE

- \* The light will blink while the device is charging.
- \* The light will become solid once the device is fully charged.

