

FRONT

CARE

- * Turn off device when not in use.
- * Do not operate the device while charging.
- * Please follow the charge times indicated in the device specifications.
- * Wash after each use with liquid anti-bacterial soap and water.
- * Pat dry with a cotton towel and allow to air dry completely.

Product Dimensions: 7.36 x 1.3 x 1.95 (in)
IPX Rating: IPX7 Waterproof 30 min. immersion 3 ft.
Battery: Rechargeable
Charge Time: Do not exceed 120 minutes
Run Time: 85 minutes
Modes: 9



pretty in
pink

LACE

For warranty information, latest products, and news visit us at:
nsnovelties.net

BACK

PLAY

- * Press & hold the power button for 2 seconds to power on and enter standby mode.
- * Quick press the power button to activate vibration at Setting 1 (low speed). Continue quick pressing to cycle upward through the settings (1 > 9).
- * Quick press the vibration button to activate vibration at Setting 9 (last pattern). Continue quick pressing to cycle downward through the settings (9 > 1)
- * Use the power and vibration buttons to switch back and forth between speeds and patterns.
- * Press & hold the power button for 2 seconds to power off.



CHARGE

- * The light will blink while the device is charging.
- * The light will become solid once the device is fully charged.

