

FRONT

⑤

⑥

①

CARE

- \* Turn off device when not in use.
- \* Do not operate the device while charging.
- \* Please follow the charge times indicated in the device specifications.
- \* Wash after each use with liquid anti-bacterial soap and water.
- \* Pat dry with a cotton towel and allow to air dry completely.

**Product Dimensions:** 6.61 x 5.04 x 1.57 (in),  
Remote: 2.56 x 1.38 x 0.63 (in)  
**IPX Rating:** IPX5 Low pressure water resistant  
Remote: IPX4 Splashproof  
**Battery:** Rechargeable, Remote: CR2032  
**Charge Time:** Do not exceed 120 minutes  
**Run Time:** 75 minutes  
**Modes:** 10



For warranty information, latest products, and news visit us at:  
[nsnovelties.net](http://nsnovelties.net)

Inya

DUET  
RECHARGEABLE VIBRATING  
DOUBLE DILDO

BACK


②

③

④


PLAY

- \* Press & hold the power button for 2 seconds to power on and enter standby mode.
- \* Quick press the power button to cycle through the vibration modes.
- \* Press & hold the power button for 2 seconds to power off.

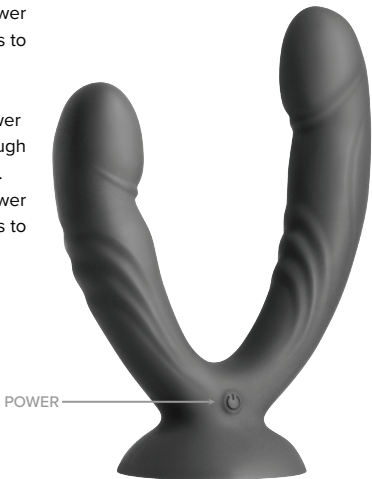

PLAY

- \* Press & hold the power button on the remote for 3 seconds until the indicator light turns on to power on.
- \* While the item is in standby mode and the remote is powered on, quick press the bottom vibration button to activate and cycle through the vibration modes on the shorter side.
- \* Quick press the top vibration button to activate and cycle through the vibrations modes on the longer side.
- \* Press and hold the power button on the remote to power off both the remote and item.

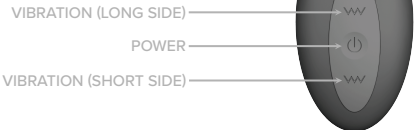

CHARGE

- \* The light will blink while the device is charging.
- \* The light will become solid once the device is fully charged.

