



VIBRATOR CARE INSTRUCTIONS

1. Take care when using the vibrator for the first time. Vibration can be intense.
2. Clean your vibrator after every use.
3. Take care when cleaning your vibrator. Remember it is an electrical item.
4. Keep your vibrator clean and dry. Store in a non-damp environment.
5. Always store your vibrator separately. Different materials have different chemical configurations and may react with each other.
6. Always allow your vibrator to cool down before storing in a safe place. Vibrators are electrical and motors grow warm with use.
7. Excessive usage of the vibrator will wear out the motor and may cause the motor to overheat. If you feel your vibrator is getting unduly hot, switch off and allow it to cool down, before continuing use.
8. Take care when using oils and lubricants so that they do not enter the battery compartment as they can react with the batteries.



BATTERY INSTRUCTIONS

This toy requires 2 x AAA batteries for operation.

Open the battery compartment on the remote control, and place the two AAA batteries in according to the + and – signs labeled on the compartment. Close the compartment.

Depending on the quality of the battery, the charge will last for about 50 minutes of play time on the lowest vibration level, and about 30 minutes of play time on the highest level.

Toy vibration slows before stopping completely when charge is fully depleted. This toy operates at a sound level of 60db.

INSTRUCTIONS FOR USE

This toy operates via its wired remote control. To turn toy on, press the power button on the remote for at least 2 seconds. The light will turn on and bullets will begin vibrating at their first frequency.

Use the frequency button to cycle through 20 different vibration speeds and functions.

To turn toy off, press power button for at least 2 seconds.