

<http://www.evolvednovelties.com/>

EVOLVED
Love is Back



Category: Vibrator
User: Women
Material: silicone
Finish: PU coating
Size: H 60mm W 33mm D 44mm
Battery: Li-polymer battery
Voltage: 220mAh
Number of Vibrations: 1PCS motor
User time: 100mins-100mins
Sound Level: Mid



Product Specifications:

Category: Vibrator
User: Women
Material: ABS hard plastic
Finish: PU coating
Size: H: 222mm
W: 30mm D: 45.5mm
Battery: Polymer Li-Ion
Voltage: 3.7V 320mAh
Number of Vibrations: 7
User time: 90+ mins.
Sound Level: mid

VIBRATOR CHARGING INSTRUCTIONS

Vibrator arrives charged. It is not necessary to charge before use.

Connect the USB plug into the USB port of your computer or other output and the other end of the DC charger into toy's input.

Initial and subsequent charges take about 70 minutes to complete.

The light will flash while device is charging, and remain solid when toy is fully charged. There is no danger of battery damage by overcharging.

Charge lasts for 90 minutes of play time at the highest setting, and about 200 minutes at lower settings.

Toy vibration slows for about five minutes before completely losing power.

ATTACHMENT CHARGING INSTRUCTIONS

This vibrator arrives with a partial charge, so it is recommended to charge it fully before use, but it does not harm the toy to use it immediately with its partial charge.

Connect the USB plug into the USB port of your computer or other output and the other end of the DC charger into toy's input.

Initial charge will take about an hour, and subsequent charges also take about an hour to complete.

The indicator light(s) will flash while device is charging, and remain solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

Charge lasts for about 200 minutes of play time on the lowest vibration level, and about 100 minutes of play time on the highest level.

ATTACHMENT INSTRUCTIONS FOR USE

This toy has a one-button control. Press the button for at least 3 seconds to turn the toy on, then press the button again more quickly to cycle through 20 different speeds and functions. Press the button again for at least 3 seconds to turn the toy off.

This toy's motor has a memory function. It will remember the last speed used, and begin with that setting the next time the toy is powered up.

