

Product Specifications:

VIBE Material: ABS Plastic Battery: Lithium battery Voltage: 3.7V Number of Vibrations: 10 User time: 60-70 minutes Sound Level: Less than 50 db

BULLET BULLET
Material: ABS
Battery: NBP-452937 500mah
Voltage: DC 3.7V
Number of Vibrations: 10 Speeds
User time: 50 mins.
Sound Level: 50 db

CHARGING INSTRUCTIONS FOR VIBRATOR
This vibrator arrives with a low partial charge, so it is recommended to fully charge it before use.

it before use.

To charge, connect the USB plug into the USB port of your computer or other output and the DC charger into input at base of toy.

Initial charge will take about 2 hours, and subsequent charges will also take about 90 minutes to complete.

The indicator light will flash while device is charging and remain solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

Charge lasts for about 70 minutes of play time at the highest level of vibration and about 60 minutes at the lowest level of vibration.

This toy operates at a sound level of less than 50db with a rechargeable lithium battery at 3.7V.

CHARGING INSTRUCTIONS FOR BULLET

This vibrating bullet arrives fully charged. You do not need to charge it before using.

To charge, connect the USB plug into the USB port of your computer or other output and the DC charger into input at base of toy.

Initial and subsequent charges take about 3 hours to complete.

Initial and subsequent charges take about 3 noors to complete.

The indicator light will flash while device is charging and remain solid when toy is fully charged. There is no danger of bottery damage by overcharging, but it's recommended not to overcharge for long periods of time.

it's recommended not to overcharge for long periods of time. Charge lasts for about 50 minutes of play time. This toy operates at a sound level of less than 50db with a rechargeable lithium battery at 3.7V.

INSTRUCTIONS FOR USE
The vibrator and bullet in this toy kit have convenient
1-button controls at their base.
To turn each toy on, press the Power Button for at
least 2 seconds. The light will turn on and toy will
begin vibrating at its first lowest frequency.
Once the toy is on, press the Power Button again, a
single time for each new speed or function for
a total of 10.
CHARGER
To turn toy off, press Power Button for at least
2 second

T.J.

USB RECHARGEABLE