



Product Specifications:

Material: Silicone Battery: Li-ion battery, 3.7V/80mAh Voltage: 3.7V Number of Vibrations: 9 User time: 60-100 minutes Sound Level: <45 dbs

CHARGING INSTRUCTIONS

This toy arrives with a partial charge, so it is recommended to fully charge before use.

To charge, connect the USB plug into the USB port of your computer or other output and the DC charger onto the magnetic pins on the inside of the toy.

Initial and subsequent charges will take about 50 minutes to complete.

The indicator light will flash while device is charging and stay constant when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time. Charge lasts for about 1 hour of play time at the highest level of vibration and about 100 minutes at the lowest level. This toy operates at a sound level of less than 45db with a rechargeable 80mAh lithium battery at 3.7V.

INSTRUCTIONS FOR USE

This toy has a convenient 1-button control in the middle of the sheath.

To turn toy on, press the Power Button for at least 3 seconds. The lights will turn on and toy will begin vibrating at its first lowest frequency.
Once the toy is on, press the Power Button
again, a single time for each
new speed or function for a total

CHARGER TO PRONGS of 9.

To turn toy off, press Power Button for at least 3 seconds.

USB RECHARGEABLE