

<http://www.genderx.com/>

GENDERX



Product Specifications:

Material: Silicone+ABS
Battery: 801630/ 380mAh
Voltage: 3.3-4.2V
Number of Vibrations: 10
with 3 levels of intensity
User time: 80 minutes
Sound Level: 54db

CHARGING INSTRUCTIONS

This vibrator arrives with a high partial charge of 80%, so it is recommended to use up this energy fully before charging completely.
To charge, connect the USB plug into the USB port of your computer or other output and the DC charger into the port at the back of the toy's base.
Initial and subsequent charges will take about 1 hour to complete.
The indicator light will flash while device is charging and turn off when toy is fully charged. There is no danger of battery damage by overcharging but it's recommended not to overcharge for long periods of time.
Charge lasts for about 80 minutes of play time.
This toy operates at a sound level of less than 54db with a rechargeable 380mAh lithium battery at 3.3 - 4.2V.

INSTRUCTIONS FOR USE

This toy has a convenient 3-button control at its base.
To turn toy on, press the Power Button (middle button) for at least 3 seconds. The lights will turn on and toy will begin vibrating and pulsing at its first lowest frequency.
Once the toy is on, press the Power Button again, a single time for each new speed or function for a total of 10.
To increase the intensity of any function, press the Plus Button (top button) up to 3 times for a maximum of 3 different intensities.
To decrease the intensity of any function, press the Minus Button (bottom button) up to 3 times to a maximum of 3 different intensities.
To turn toy off, press Power Button for at least 3 seconds.

