

Product Specifications:

Material: Silicone + ABS

Battery: Lithium battery

Voltage: 3.7V

Number of Vibrations: 10

User time: 1.5-2h

Sound Level: Less than 50 db

CHARGING INSTRUCTIONS
The bullet that powers this toy arrives with a partial charge of about 70%, so it may be used immediately or charged fully before first use.
To charge, connect the USB plug into the USB port of your computer or other output and the DC charger end into the port at the back of the toy. You may also remove the bullet from the

toy. You may also remove the bullet from the toy to recharge.
Initial and subsequent charges will take about 1 hour to complete.
The indicator light will flash while device is charging and turn off when toy is fully charged. There is no danger of battery damage by overcharaina but it's damage by overcharging but it's recommended not to overcharge for long

periods of time. Charge lasts for about 1.5 hours of play time at the highest level of vibration and about 2 hours at the lowest level.

This toy operates at a sound level of less than 50db with a rechargeable lithium battery at 3.7V.

INSTRUCTIONS FOR USE
The bullet that powers this toy has a convenient
1-button control at its base.

To turn toy on, press the Power Button for at least 3 seconds. The lights will turn on and toy will begin vibrating at its first lowest frequency. Once the toy is on, press the Power Button again, a single time for each new speed or function for a total of 10.

USB RECHARGEABLE

To turn toy off, press Power Button for at least 3 seconds.

INSERT / Charger Here