

and turn off when toy is fully charged. There is no danger of battery damage by overcharging but it's recommended not to overcharge for long periods of time. Charge lasts for about 40 minutes of play time at the highest level of vibration and about 70 minutes at the lowest level. This toy operates at a sound level of less than 50db with a rechargeable 200mAh lithium battery at 3.7V. USAGE INSTRUCTIONS This toy has a 1-button control at its base. To turn toy on, press the Power Button for at least 2 seconds. The light will turn on and toy will begin vibrating at its first lowest frequency. Once the toy is on, press the Power Button again, a single time for each new speed or function for a total of 19. INSERT \mathbf{O} To turn toy off, press Power Button for at CHARGER least 2 seconds

🕾 🔝 USB RECHARGEABLE

mm