

**Product Specifications:** 

Material: ABS + TPE Battery: INR 18650 battery /

2200mAh Voltage: 3.6V

Number of Functions: 7 User time: 70 mins on highest level, 2 hours on lowest level

Sound Level: less than 60<db



CHARGING INSTRUCTIONS
This vibrator arrives with partial charge, so it is recommended to fully charge before use.
Connect the USB plug into the USB port of your computer or other output and the other end of the DC charger into toy's input at the base of the toy.
Initial charge will take about 2 hours and subsequent charges will take about 4 hours to complete.
The indicator light will flash slowly while device is charging and turn solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time. Charge lasts for about 2 hours of play time on the lowest level of vibration, and about 70 minutes on the highest level.

level.
This toy operates at a sound level of 60 db with an 2200mAh battery, at a voltage of 3.7V.



INSTRUCTIONS FOR USE
This toy operates with a 4-button control panel on its handle.
Use the top Power Button to turn the toy on by pressing it for at least three (3) seconds. The toy will enter standby mode and the LED light will illuminate.
Press the Thrusting & Rotation Button (second button from the top) to engage the thrusting and rotating motor at its lowest speed, then press again to cycle through seven (7) thrusting and rotating speeds and the off position.
Use the Turbo Button (third button down) to immediately engage a blast of maximum motor power. Press the button again to disengage turbo mode.
Use the Audio Button (bottom button) to operate the voice audio. Press to engage the first voice clip and press again to switch to the second one. Use included headphones to listen using the audio cable port at the base of the toy (same as recharging port).

using the audio cable port at the base of the toy (same as recharging port).
To Turn off the toy, press the top Power Button for at least two (3) seconds.
How to use the hands-free suction cup mount:
Find a clean surface and press the powerful suction cup down until you feel a secure grip. Fasten the screw mount on the bottom of the toy onto the male screw at the top of the suction cup base. Turn until the toy grip, the suction cup base. Turn until the toy grip the suction cup base. Turn until the toy grip the suction cup base. Turn until the toy grip these to be the hinge tightener to hold the angle you desire. INSERT CHARGER

USB RECHARGEABLE