

<http://www.evolvednovelties.com/>

EVOLVED
Love is Back



Product Specifications:

Material: Silicone & ABS
Battery: Polymer Lithium-ion Battery
601230 3.7V 180mAh 0.666Wh
Remote control: Li-ion Polymer
Battery 401020 3.7V 55mAh 0.2Wh
Voltage: 3.7V
Number of Vibrations: 7
User time: 90 Minutes
Sound Level: ≤60Db

CHARGING INSTRUCTIONS

This vibrator arrives with low partial charge of about 30%. It is recommended to use up this energy first before fully charging for the first time. Repeat this sequence for three battery cycles to maximize battery life.

Connect the USB plug into the USB port of your computer or other output and the other end of the DC charger into the input at the back of the toy's base.

Initial and subsequent charges will take about two hours to complete.

The indicator light will flash on toy while device is charging and become solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

Charge lasts for about 90 minutes of average play time.

This toy operates at a sound level of less than 60db with a 180mAh lithium battery at a voltage of 3.7V.

The remote control is operated with a 55mAh polymer battery at 3.7V, included. Not rechargeable.

INSTRUCTIONS FOR USE

This toy can be operated directly with the button at its base, or with the two buttons on its remote control. Important note: You cannot turn the toy ON or OFF with the remote control. Use the button directly on the toy to power it on.

OPERATE WITH TOY DIRECTLY

Press the Power Button at toy's base for at least 3 seconds to turn toy on. The LED light will illuminate and the toy's motor will be in standby mode.

Press the Power Button again more quickly to cycle through 7 different thrusting & vibration speeds and functions, as well as standby.

Once the toy is on, you may power on the remote and use its buttons to operate thrusting & vibration functions separately.

To turn toy off, press Power Button for at least 3 seconds.

OPERATE WITH REMOTE CONTROL

Once the toy is on (by using the button at its base), press the Power Button for at least 3 seconds to start the first function.

Use the Function Button on remote to cycle through 7 different thrusting & vibration speeds and functions.

Press the Power Button again for 3 seconds to put the toy in standby mode (no matter what speed it's on). To turn the toy off completely, use the toy's button directly.

