

PLAYBOY

Pleasure

Product Specifications:

Material: Silicone & ABS Plastic
Battery: 902030 Li-ion Battery
Voltage: 500mah
Number of Vibrations: 10
User time: 60 minutes
Sound Level: <50dbs



USB
RECHARGEABLE

CHARGING INSTRUCTIONS

This toy arrives with a partial charge. It is recommended to charge the toy fully before use.

To charge, connect the USB plug into a USB power source at one end, and the DC charger plug into the port at the back of the toy's base.

Initial and subsequent charges will take about 90 minutes to complete.

The indicator light will flash while device is charging and stay constant when toy is fully charged. There is no danger of battery damage by overcharging but it's recommended not to overcharge for long periods of time.

Charge lasts for about 1 hours of play time on the highest level of vibration.

This toy operates at a sound level of less than 50db with a rechargeable 500mAh lithium battery at 3.7V.

INSTRUCTIONS FOR USE

This toy has a 2-button control at its base and a 2-button control on its remote control. The toy must be turned on and off with the power button at its base – the remote cannot turn toy on and off.

OPERATE WITH TOY DIRECTLY:

Press the power button on the toy for 3 seconds to turn the toy on and put all motors and functions in standby. Press power button again more quickly to engage and operate the 'come hither' motion in the head of main shaft – up to 10 speeds.

Once the toy is in standby, press the vibration button to engage and operate the vibration in both motors – in the main shaft and one at the base. Press the button again more quickly to cycle through 10 speeds & rhythms.

OPERATE WITH REMOTE CONTROL:

Press the power button to turn on the remote control (toy must be powered on separately with its direct button). Press the power button again more quickly to cycle through 10 speeds of come-hither motion in the main shaft head.

Press the Function button to engage the vibration motor. Press it more quickly to cycle through 10 speeds and rhythms which operate simultaneously.

Turn the remote off by pressing the power button for 3 seconds. Turn the toy off by pressing the power button on the toy directly for about 3 seconds.

VIBRATOR CARE INSTRUCTIONS

1. Compatible with Playboy Pleasure – Slick; H2O lubricant as well as other water-based lubricants. Make sure lubricants do not enter the battery compartment, as they may react with the batteries. Avoid use with silicone or oil-based lubricants as it will degrade the material overtime.
2. Continuous constant use of the vibrator's motor may create excessive heat. If your vibrator feels too hot, switch it off and allow it to cool before continuing use. Avoid prolonged exposure to sunlight and extreme heat.
3. Clean your vibrator after every use with Playboy Pleasure – Clean; Foaming Toy Cleaner and a warm water rinse. Dry thoroughly before storage.
4. Store your vibrator in a cool, dry place separated from other toys, as toy materials sometimes react chemically with each other.

CONTAINS BATTERY
AND MUST BE RECYCLED



Li-ion