

# PLAYBOY

## *Pleasure*

### Product Specifications:

Material: Silicone & ABS Plastic  
Battery: 751525-240mAh, lithium battery  
Voltage: 3.7V  
Number of Vibrations: 10 vibration  
User time: 40 - 50 minutes  
Sound Level: ≤60db



### CHARGING INSTRUCTIONS

It's recommended to charge toy fully before first use. Connect the USB plug into a power source and the other end into the toy's DC charging port, located at the base of the Kegel ball, on the opposite side from the power button. Initial and subsequent charges will take about an hour to complete.

The indicator light will flash on toy while device is charging and become solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time. Charge lasts for about 50 minutes of play time on the lowest level of vibration, and about 40 minutes on the highest level.

This toy operates at a sound level of less than 60db with a 240mAh lithium battery at a voltage of 3.7V.

The remote control is operated by a lithium battery, already installed.

### INSTRUCTIONS FOR USE

This toy can be operated directly with the button at its base, or with the button on its remote control. Important note: You cannot turn the toy ON with the remote control, but you can turn it off. Use the button directly on the toy to power it on.

### OPERATE WITH TOY DIRECTLY

Press the button at toy's base for at least 3 seconds to turn toy on. The light will go on and toy will be in standby mode. Press the button once and the toy will begin vibrating at its lowest speed. Press the button again more quickly to cycle through 10 vibration speeds and functions. To turn toy off, press button for at least 3 seconds.

Once the toy is on, you may power on the remote and use its buttons to operate vibrations and functions separately.

### OPERATE WITH REMOTE CONTROL

Once the toy is on (by using the button at toy's base), press the button on remote once and the toy will begin vibrating at its lowest speed. Press again more quickly to cycle through 10 vibration speeds and functions. Press the button again for 3 seconds to turn off the toy.

### VIBRATOR CARE INSTRUCTIONS

1. Compatible with Playboy Pleasure - Slick: H2O lubricant as well as other water-based lubricants. Make sure lubricants do not enter the battery compartment, as they may react with the batteries. Avoid use with silicone or oil-based lubricants as it will degrade the material over time.
2. Continuous constant use of the vibrator's motor may create excessive heat. If your vibrator feels too hot, switch it off and allow it to cool before continuing use. Avoid prolonged exposure to sunlight and extreme heat.
3. Clean your vibrator after every use with Playboy Pleasure - Clean; Foaming Toy Cleaner and a warm water rinse. Dry thoroughly before storage.
4. Store your vibrator in a cool, dry place separated from other toys, as toy materials sometimes react chemically with each other.

CONTAINS BATTERY  
AND MUST BE RECYCLED



Li-ion