

PLAYBOY

Pleasure

Product Specifications:

Material: Silicone & ABS Plastic
Battery: 751525 Li-ion Battery
Voltage: 240mah
Number of Vibrations: 10
User time: 60 minutes
Sound Level: <50dbs



CHARGING INSTRUCTIONS

This vibrator arrives with a partial charge, so it is recommended to charge before use. Connect the USB plug into a USB power source and the other end onto the magnetic pins on the toy's back panel, located below the toy's button.

Initial and subsequent charges will take about 90 minutes to complete.

The indicator light will flash on toy while device is charging and become solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time. Charge lasts for about an hour of play time with average use.

This toy operates at a sound level of less than 50db with a 240mAh lithium battery at a voltage of 3.7V. The remote is operated by a CR2032 button battery, already installed.

INSTRUCTIONS FOR USE

Operate with Remote Control— Once the toy is on (by using button toy's back panel), press the Power Button on remote twice to start toy's first vibration speed. Use the Function Button on remote to cycle through 10 different speeds and rhythms. Press the Power Button again to turn off the remote control, which will put the toy in standby mode. The toy must be turned off directly with its own button.

OPERATE WITH TOY DIRECTLY

Press the button on toy's back panel for at least 3 seconds to turn toy on. Press the button again more quickly to cycle through 10 different vibration speeds and rhythms. Once the toy is on, you may power on the remote and use its buttons to operate vibrations. To turn toy off, press button for at least 3 seconds.

OPERATE WITH REMOTE CONTROL

Once the toy is on (by using button toy's back panel), press the Power Button on remote twice to start toy's first vibration speed. Use the Function Button on remote to cycle through 10 different speeds and rhythms. Press the Power Button again to turn off the remote control, which will put the toy in standby mode. The toy must be turned off directly with its own button.

VIBRATOR CARE INSTRUCTIONS

1. Compatible with Playboy Pleasure - Silk; H2O lubricant as well as other water-based lubricants. Make sure lubricants do not enter the battery compartment, as they may react with the batteries. Avoid use with silicone or oil-based lubricants as it will degrade the material overtime.
2. Continuous constant use of the vibrator's motor may create excessive heat. If your vibrator feels too hot, switch it off and allow it to cool before continuing use. Avoid prolonged exposure to sunlight and extreme heat.
3. Clean your vibrator after every use with Playboy Pleasure - Clean; Foaming Toy Cleaner and a warm water rinse. Dry thoroughly before storage.
4. Store your vibrator in a cool, dry place separated from other toys, as toy materials sometimes react chemically with each other.

CONTAINS BATTERY AND MUST BE RECYCLED

