

PLAYBOY

Pleasure

Product Specifications:

Material: Silicone & ABS Plastic
Battery: Li-ion battery
Voltage: 3.7V
Number of Vibrations: 10
User time: 60 minutes
Sound Level: <60dbs



CHARGING INSTRUCTIONS

It is recommended to fully charge this vibrator before first use. Charging takes 4-6 hours initially, with 2-3 hour subsequent charges.

Connect the USB plug into a USB power source and the other end of the DC charger into toy's input at the side of its base.

The indicator light will flash while device is charging and turn solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

Charge lasts for about 60 minutes of play time on highest level of vibration.

This toy operates at a sound level of less than 60db with a lithium battery at a voltage of 3.7V.

INSTRUCTIONS FOR USE

This toy operates with a 3-button control panel at the base of the toy's handle. The center button turns the toy on and off, and the plus and minus buttons increase and decrease the speeds and functions respectively.

Press the center button for at least 3 seconds to turn toy on (or off). The button will light up and vibration will begin at its lowest speed.

Use the plus button on top to cycle up through the toys 10 vibration speeds and rhythms and use the minus button to cycle back down through the toys vibration speeds and rhythms.

VIBRATOR CARE INSTRUCTIONS

1. Compatible with Playboy Pleasure - Slick: H2O lubricant as well as other water-based lubricants. Make sure lubricants do not enter the battery compartment, as they may react with the batteries. Avoid use with silicone or oil-based lubricants as it will degrade the material over time.
2. Continuous constant use of the vibrator's motor may create excessive heat. If your vibrator feels too hot, switch it off and allow it to cool before continuing use. Avoid prolonged exposure to sunlight and extreme heat.
3. Clean your vibrator after every use with Playboy Pleasure - Clean; Foaming Toy Cleaner and a warm water rinse. Dry thoroughly before storage.
4. Store your vibrator in a cool, dry place separated from other toys, as toy materials sometimes react chemically with each other.

