

# PLAYBOY

## *Pleasure*

### Product Specifications:

Material: Silicone & ABS Plastic

Battery: Product: Rechargeable Lithium Polymer battery, 3.7V/140mAh

Remote: Rechargeable Lithium Polymer battery, 3.7V

Voltage: 3.7V

Number of Vibrations: 9

User time: 30 - 60 minutes

Sound Level: <50dbs



USB  
RECHARGEABLE

#### CHARGING INSTRUCTIONS

This vibrator arrives with low partial charge, so it is recommended to fully charge before use.

Connect the USB plug into the USB port of your computer or other output and the other end of the DC charger into toy's input below the control panel.

Initial and subsequent charges will take about 30 minutes to complete.

The indicator light will flash on toy while device is charging and become solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

Charge lasts for about 60 minutes of play time on the lowest level of vibration, and about 30 minutes on the highest level.

This toy operates at a sound level of less than 50db with a 140mAh lithium battery at a voltage of 3.7V.

The remote control is also USB rechargeable. Plug in the provided cable to a USB port in your computer or other output and the other end into the remote control's input port. Charge will take about an hour.

#### INSTRUCTIONS FOR USE

This toy can be operated directly with the button at the back of the thick ring, or with the two buttons on its remote control. Important note: You cannot turn the toy ON or OFF with the remote control. Use the button directly on the toy to power it on.

OPERATE WITH TOY DIRECTLY

Press the Power Button at the back of the thick ring for at least 3 seconds to turn toy on. Blue LED will illuminate and toy will be in standby mode. Press the Power Button again more quickly to cycle through 9 different vibration speeds and functions in all three motors at once, including off. To turn toy off, press Power Button for at least 3 seconds.

Once the toy is on, you may power on the remote and use its buttons to operate vibrations and functions separately.

OPERATE WITH REMOTE CONTROL

Once the toy is on (by using the button on toy directly), press the Power Button on remote for at least 3 seconds to turn it on.

Use the Function Button on remote to cycle through 9 different vibration speeds and functions.

Press the Power Button again for 3 seconds to put the remote and toy in standby mode (no matter what speed it's on), during which time you can engage the toy again within 20 minutes. After 20 minutes, the toy and the remote will power off automatically.

#### VIBRATOR CARE INSTRUCTIONS

1. Compatible with Playboy Pleasure - Slick: H2O lubricant as well as other water-based lubricants. Make sure lubricants do not enter the battery compartment, as they may react with the batteries. Avoid use with silicone or oil-based lubricants as it will degrade the material overtime.
2. Continuous constant use of the vibrator's motor may create excessive heat. If your vibrator feels too hot, switch it off and allow it to cool before continuing use. Avoid prolonged exposure to sunlight and extreme heat.
3. Clean your vibrator after every use with Playboy Pleasure - Clean: Foaming Toy Cleaner and a warm water rinse. Dry thoroughly before storage.
4. Store your vibrator in a cool, dry place separated from other toys, as toy materials sometimes react chemically with each other.

CONTAINS BATTERY  
AND MUST BE RECYCLED



Li-ion