

PLAYBOY

Pleasure

Product Specifications:

Material: TPE & ABS Plastic
Battery: 1800mAh
Voltage: 3.6V
Number of Vibrations: 7
User time: 40 - 70 minutes
Sound Level: <60dbs



CHARGING INSTRUCTIONS

This toy arrives with a partial charge, so it recommended to charge it fully before first use. Connect the USB plug into your power source and the other end of the DC charger into the toy's cable port located at the toy's base.

The battery will charge fully in about 3 hours.

The indicator light will flash while device is charging and remain solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

Charge lasts for about 70 minutes of play time with the lowest level of vibration, and 40 minutes with the highest level of vibration.

This toy operates at a sound level of less than 60db and a voltage of 3.7V with a 1800mAh lithium battery.

INSTRUCTIONS FOR USE

This toy has a 4-button control panel on its handle, 1-4 starting from the top. To turn the toy on, press the Power Button(button 1)for at least 3 seconds. The button will light up, and the up & down moving beaded rings will begin at its lowest speed. Once the toy is powered up , change the beaded rings speeds & rhythms by pressing the Bead button(button 3). Each press cycles through 7 bead-stroking modes. To activate the vibration function press the Vibration Button(button2) once. Press it again to cycle through 7 speeds & rhythms. Use button 4 to pause all functions momentarily while in use. To turn toy off, press the Power Button(Button 1) for at least 3 seconds. All functions will cease and lights will turn off.

VIBRATOR CARE INSTRUCTIONS

1. Compatible with Playboy Pleasure - Slick; H2O lubricant as well as other water-based lubricants. Make sure lubricants do not enter the battery compartment, as they may react with the batteries. Avoid use with silicone or oil-based lubricants as it will degrade the material overtime.
2. Continuous constant use of the vibrator's motor may create excessive heat. If your vibrator feels too hot, switch it off and allow it to cool before continuing use. Avoid prolonged exposure to sunlight and extreme heat.
3. Clean your vibrator after every use with Playboy Pleasure - Clean; Foaming Toy Cleaner and a warm water rinse. Dry thoroughly before storage.
4. Store your vibrator in a cool, dry place separated from other toys, as toy materials sometimes react chemically with each other.

CONTAINS BATTERY
AND MUST BE RECYCLED



Li-ion