

Product Specifications:

Material: TPR rubber Battery:4 AAA batteries Number of Vibrations: 12 Sound Level: <60 db



INSTRUCTIONS FOR USE

- 1. Insert batteries and press the up-arrow button on the vibration panel to begin vibration at its lowest speed. Press again to cycle through 12 speeds and patterns. The down arrow cycles through the speeds and patterns in reverse.
- 2. Press the up-arrow button on the rotation panel to begin rotation and thrusting in the shaft. Press again to cycle through 6 speeds and patterns. The down arrow cycles through the speeds and patterns in reverse.
- 3. Press the R/S button to reverse the rotation of the beads in the shaft.
- 4. To turn the toy off, press the down arrows on each motor until function stops.