

PLAYBOY

Pleasure

Product Specifications:

Material: Silicone, TPE, & ABS
Battery: 1800mAh
Voltage: 3.6V
Number of Vibrations: 7 vibrating, 8 thrusting
User time: 45 – 70 Minutes
Sound Level: ≤ 60 db



CHARGING INSTRUCTIONS

Please charge this toy fully before first use. Charges will take about 3 hours to complete. To charge, connect one end of the USB plug into a power source, and the other into the charging port located at the side of the handle's base.

NOTE: There are 2 USB ports on this device – 1 on the removable cap / UV wand for warming and sanitizing, 1 on the handle that charges the toy.

The indicator light will flash while device is charging and stay constant when toy is fully charged. Charge lasts for about 70 minutes of play time at the lowest level and 45 minutes at the highest level of play. This toy operates at a sound level of less than 60db with a rechargeable 1800mAh lithium battery at 3.6V.

INSTRUCTIONS FOR USE

1. There is a 3-button control panel at the handle of the canister with a power button, a thrusting button and vibration button. Motors can be operated independently.
2. Press the power button for about 2 seconds to turn toy on. The button will light up and the stroking function will begin at its first frequency.
3. Press the stroking button again to cycle through 8 stroking speeds and rhythms in the sleeve. Press & hold the button for 2 seconds to put stroking function back in standby.
4. Press the vibration button (wavy lines) for about 2 seconds to engage the vibration motor, pressing it again to cycle through 7 vibrating speeds and rhythms in the sleeve. Press & hold the button for 2 seconds to put vibration function back in standby.
5. To turn the toy off completely, press the power button for about 2 seconds. The light will turn off and both motors will cease.
6. To use the warming function, connect the USB cable to a power source on one end and the other end on the USB port on the removable cap / UV wand. Once plugged in, the wand will automatically heat the toy to between 100°–104° F.
7. To use the UV sanitizing function, connect the USB cable as above for warming. The UV light will turn on and be ready to sanitize by placing the toy's sleeve over the wand.

VIBRATOR CARE INSTRUCTIONS

1. Compatible with Playboy Pleasure – Slick: H2O lubricant as well as other water-based lubricants. Make sure lubricants do not enter the battery compartment, as they may react with the batteries.
2. Continuous constant use of the vibrator's motor may create excessive heat. If your vibrator feels too hot, switch it off and allow it to cool before continuing use.
3. Clean your vibrator after every use with Playboy Pleasure – Clean: Foaming Toy Cleaner and a warm water rinse. Dry thoroughly before storage.
4. Store your vibrator in a cool, dry place separated from other toys, as toy materials sometimes react chemically with each other.

