

Product Specifications:

Material: Silicone & ABS Battery: 102540 1200mAH

Voltage: 3.7V

Number of Vibrations: 8 vibrating, 3 thrusting User time: 60 - 90 Minutes

Sound Level: ≤55dB

CHARGING INSTRUCTIONS



USB RECHARGEABLE

CHARGING INSTRUCTIONS
It is recommended to fully charge this toy before first use. Initial charge will complete in about 2 hours, subsequent charges in about 3 hours.

Connect the USB cable to a power source at one end and plug the other end onto the charging pins at the side of the toy's base. An indicator light means the toy is charging.

Battery charge lasts for about 90 minutes on the lowest frequency, and about 1 hour on the highest frequency. This toy operates at a the highest frequency. This toy operates at a sound level of less than 55db with a 1200mAh battery at 3.7V.

INSTRUCTIONS FOR USE

1. Press the button at the side of the toy's base for 2 seconds to turn the toy on. The light will turn on and both motors will begin in standby.

2. Press the same button more quickly to

operate the thrusting function, cycling

through 3 speeds.

3. Press the center power button on the remote control to turn it on. The light will turn on and the remote will be ready to operate vibration and thrusting functions. NOTE: The remote power button only pertains to the remote. The toy itself must be turned on and off completely with its own button.

4. Press the vibration (wavy lines) button on the remote to engage the vibration motor.

Press again to cycle through 8 speeds and functions. functions.

5. Press the thrusting button on the remote to engage the thrusting motor. Press again to cycle through 3 thrusting speeds.