

Product Specifications:

Material: Silicone & ABS Battery: Polymer Li-ion Battery 802040/650mAh/3.7V Voltage: 3.7V Number of Vibrations: 9 vibrating, 9 thrusting User time: 60 - 80 Minutes Sound Level: ≤55DB



CHARGING INSTRUCTIONS
It is recommended to use up the battery energy before first charge. Repeat this pattern 3 times for maximum battery life. To charge, connect the USB plug into a power source at one end and the DC charger onto the magnetic pins underneath the toy's handle. The LED light will flash while the device is charging and remain solid when fully charged. Charges take about 90 minutes to complete.

Charge lasts for about 80 minutes of play time on the minutes of play time on the lowest vibration level, and about 60 minutes of play time on the highest level. This toy operates at a sound level of 55db with a 650mAh lithium battery at 3.7V.

cease.

INSTRUCTIONS FOR USE

1. The control button is located underneath the toy's handle.

2. Press the button for 2 seconds 2. Press the button for 2 seconds to turn the toy on. The toy will vibrate twice and the button will light up to indicate that both motors are in standby mode.

3. Press the button again more quickly to cycle through 9 vibrating / thrusting speeds and patterns. Please note motors appared together. operate together.
4. To turn the toy off, press the button for 2 seconds. The light will turn off and the motors will