

PLAYBOY

Pleasure

Product Specifications:

Material: Silicone & ABS
Battery: 700mAh
Voltage: 5V
Number of Vibrations: 10 vibrating, 3 come hither
User time: 100 – 150 Minutes
Sound Level: <50dB

CHARGING INSTRUCTIONS

Please charge this toy fully before first use. Initial charge will take about an hour, subsequent charges about 2.5 hours. To charge, connect the USB plug into a power source at one end, and the DC charger onto the magnetic charging pins located at the toy's base.

Charge lasts for about 150 minutes of play time at the lowest level and 100 minutes at the highest level with 4 motors in use. This toy operates at a sound level of less than 50db with a rechargeable 700mAh lithium battery at 5V.

ATTACH USB
CHARGER
TO PRONGS



USB
RECHARGEABLE

INSTRUCTIONS FOR USE

1. The 3-button control panel is located at the toy's base.
2. Press the middle button for 3 seconds to turn on the come-hither motion in the main shaft. The button will light up and motor will begin in its slowest speed. Press again more quickly to cycle through 3 come-hither speeds. Press for 3 seconds to turn off.
3. Press the button closest to the charging pins for 3 seconds to turn on vibration in the main shaft. The button will light up and the motor will begin in its slowest speed. Press again more quickly to cycle through 10 vibration speeds and rhythms. Press for 3 seconds to turn off.
4. Press the button furthest from the charging pins for 3 seconds to turn on vibration in the anal and clitoral shafts simultaneously. The button will light up and the motors will begin in their slowest speed. Press again more quickly to cycle through 10 vibration speeds and rhythms. Press for 3 seconds to turn off.

VIBRATOR CARE INSTRUCTIONS

1. Compatible with Playboy Pleasure – Slick: H2O lubricant as well as other water-based lubricants. Make sure lubricants do not enter the battery compartment, as they may react with the batteries.
2. Continuous constant use of the vibrator's motor may create excessive heat. If your vibrator feels too hot, switch it off and allow it to cool before continuing use.
3. Clean your vibrator after every use with Playboy Pleasure – Clean: Foaming Toy Cleaner and a warm water rinse. Dry thoroughly before storage.
4. Store your vibrator in a cool, dry place separated from other toys, as toy materials sometimes react chemically with each other.

