

Product Specifications:

Material: Silicone & ABS Battery: lithium battery Voltage: 3.7V Number of Vibrations: 10 User time: 40 -50 minutes Sound Level: ≤50db

CHARGING INSTRUCTIONS

It is recommended to charge this toy before first use. To charge, connect the USB It is recommended to charge this toy before tirst use. To charge, connect the USB plug into a power source and the DC charger into the charging port at the bottom of the toy's base. The indicator light will flash while device is charging and stay constant when toy is fully charged.

Charges will take about 80 minutes to complete.

Charge lasts for about 50 minutes of play time at the lowest speed, and 40 minutes at the fastest speed. This toy operates at a sound level of less than 50db with a

rechargeable lithium battery at a voltage of 3.7V. The remote control is not rechargeable. It uses 1 x AAA battery, not included.

INSTRUCTIONS FOR USE

1. Press the button at the toy's base for 2 seconds to turn the toy on. The button will light up and toy will begin in standby. 2. Press button again for 0.5 seconds at a time to cycle through 3 speeds & 7 patterns. 3. Turn on remote by pressing the center power button for at least 2 seconds. The button will light up and remote will be ready to use. Press again for 2 seconds to turn off. 4. Use the plus and minus buttons on the remote to move forwards and backwards on the INSERT Charger Here speeds and patterns sequence.
5. To turn toy off, press button for at least 2 seconds. Vibration will stop and light will turn off. NOTE: The remote cannot turn the toy on or off by itself. Use the toy's button to turn on initially and off completely.

USB RECHARGEABLE