

FRONT

bodywand™
MENSWAND

Compact
Powerful
Rechargeable
Massager

IMPORTANT SAFETY INSTRUCTIONS:
All safety and operating instructions
should be carefully read before use.

CAUTION: To reduce the risk of electric
shock, do not remove cover or open the
device. There are no serviceable parts
inside.

Vibration mode

1. Plug the jack of the USB cord in to the
socket at the bottom of the massager.

Bottom of the wand

2. Plug the USB end of the cord into the
USB port of your computer or another
power source. The blue LED will light
up under the button of the massager
indicating battery charging.

Bottom of the wand

3. The blue light will turn off when the
battery is fully charged. It takes appx
6 hours to fully charge (depending on
power supply).

4. The Bodwand MensWand cannot be
used while charging.

Vibration mode

Bottom of the wand

1. Press button to turn on the massager mode 1.

2. Press button to change intensities. Total 8 intensities.

3. Press button to change the vibration mode. Push
once to move to the next mode. In total there are
20 massage modes.

20 Vibration Modes:

Mode 1:

Mode 2:

Mode 3:

Mode 4:

Mode 5:

Mode 6:

Mode 7:

Mode 8:

Mode 9:

Mode 10:

Mode 11:

331 mm

60 mm

BACK

Mode 12:

Mode 13:

Mode 14:

Mode 15:

Mode 16:

Mode 17:

Mode 18:

Mode 19:

Mode 20:

Bottom of the wand

TRAVEL LOCK:

- This Bodywand product features a travel
lock for safe and convenient travel.

- Press and hold the button for 3 seconds.
A blue light will indicate the massager is
locked on button.

- To unlock, simply repeat by pressing and
hold the button for 3 seconds, the
blinking blue flashing light will indicate the
massager is unlocked.

- Charging the MensWand will also
automatically disengage the travel lock.

WARNING: For adult use only.
For external use only. Remove
all scarves, neckties, necklaces,
and jewelry before using this
massager.

IMPORTANT: Any individual who
may be pregnant, has a pacemaker,
suffers from diabetes, phlebitis and/or
thrombosis, is at an increase risk of
developing blood clots, or who has
pins/screws/artificial joints or other
medical devices implanted in his/her
body should consult with a physician
before using a massaging device
designed for home use.

CARE AND MAINTENANCE

Clean the massager with a soft,
damp cloth. DO NOT clean with an
alcohol or chemical-based cleaner.

STORAGE:

Store at 20°C - 25°C
Store at cool dry place.

SPECIFICATIONS:

- Power - 3.7V/ 1800MAH USB 2.0

- Battery Life: Up to 5 hours use depending
on speed and massage platform choosen.

- Splash proof for cleaning the wand only,
can not play under water.

DISCLAIMER:

BODYWAND SHALL NOT BE LIABLE
FOR INCIDENTAL OR CONSEQUENTIAL
DAMAGES RESULTING FROM THE
MISUSE OF THIS PRODUCT.

FC CE

Generation Products™
Horsham, PA 19044
All Rights Reserved

Menswand